

ROLAND DG MISC MACHINE MAINTENANCE

IMPACT PRINTERS, VINYL CUTTERS, LASER DECORATORS
COVID-19 SITUATION

IMPORANT INFORMATION

- For customers using Impact Printer, Laser Decorator, or Vinyl Cutter, please be sure to follow the instructions shown below when the machine is not in use for a prolonged period.

DISCONNECT THE MACHINE

- Disconnect the power cord to prevent an accident caused by unexpected electric leakage or unintentional start of the machine.

TEMPERATURE AND HUMIDITY

- For the machine not to be affected by temperature or humidity drop/increase, please make sure to keep the suggested level in the room, where the machine is located.

USEFUL LINKS

- User's Manual Page <https://webmanual.rolanddg.com/>
- Contact Roland Support <https://www.rolanddg.com.au/support/customer-support-form>